
DETAIL 07 - USING ANGLE BRACKET

ALWAYS MEASURE AT MID POST FOR VISTA & WOOD SQUARE POST

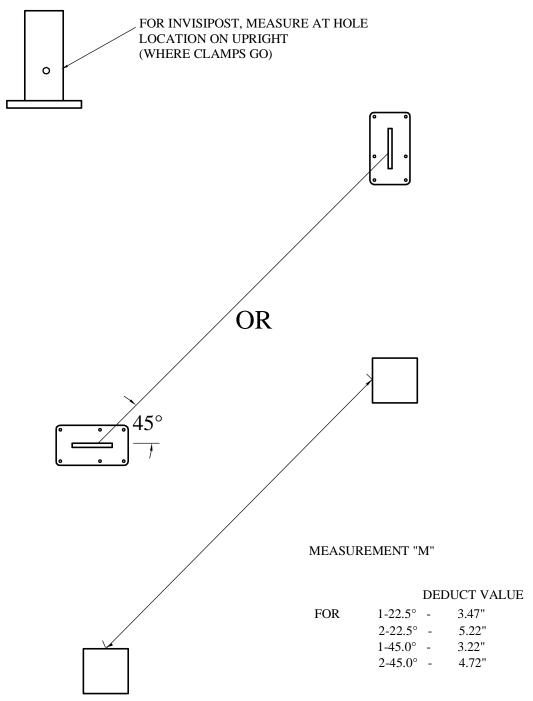

GLASS SIZE = MEASUREMENT LESS DEDUCT VALUE
OR
GLASS SIZE +DEDUCT VALUE =INSIDE DIM ON POST