


HOW TO MEASURE FOR INVISIRAIL® STAIR GLASS

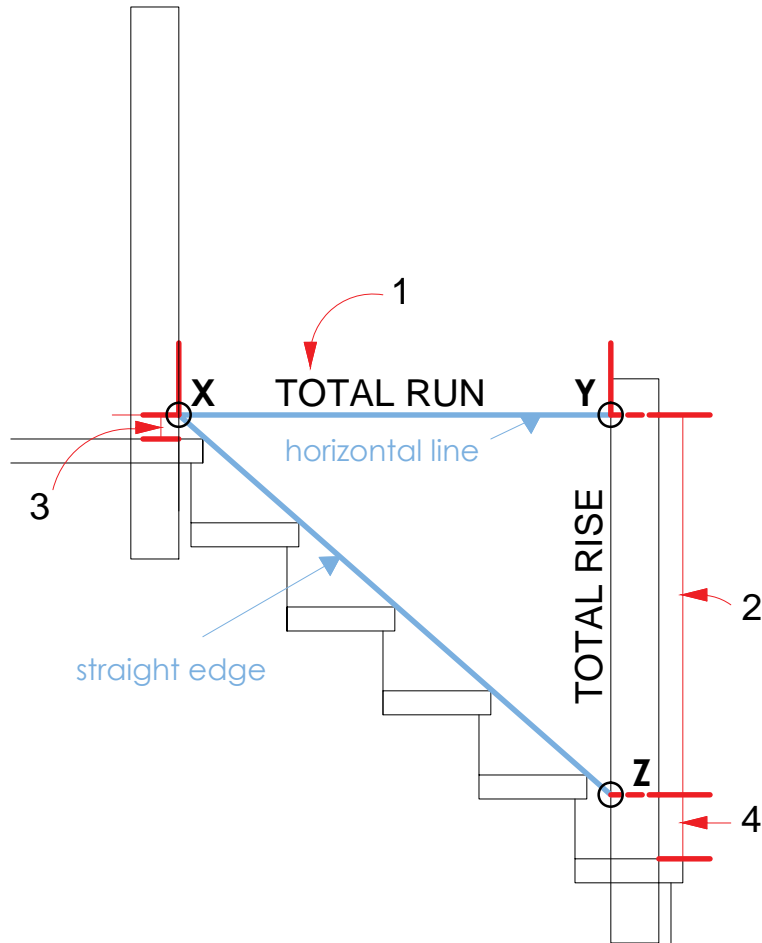

Upper and lower posts must be absolutely vertical (plumb).

Lay a straight edge along the stair nosing which intersects both upper and lower posts (X & Z).

Distance **1**: measure X to Y - the horizontal inside distance between the posts to determine the **total run**.

Distance **2**: measure the vertical distance from Y to Z (**total rise**). Point Y must be level with point X.

Distance **3**: measure the height off the deck to where the straight edge meets the upper post (X).

Distance **4**: measure the height off the lower deck/stair to where the straight edge meets the lower post (Z).